



Spare parts for:
Ice makers

 


Timers and cycle reversing switches



This catalogue is automatically generated.
Therefore, the sequence of the items might
not be always shown at best.
Updates will be issued in case of additions
and/or amendments.

Rel. 2014-04281022

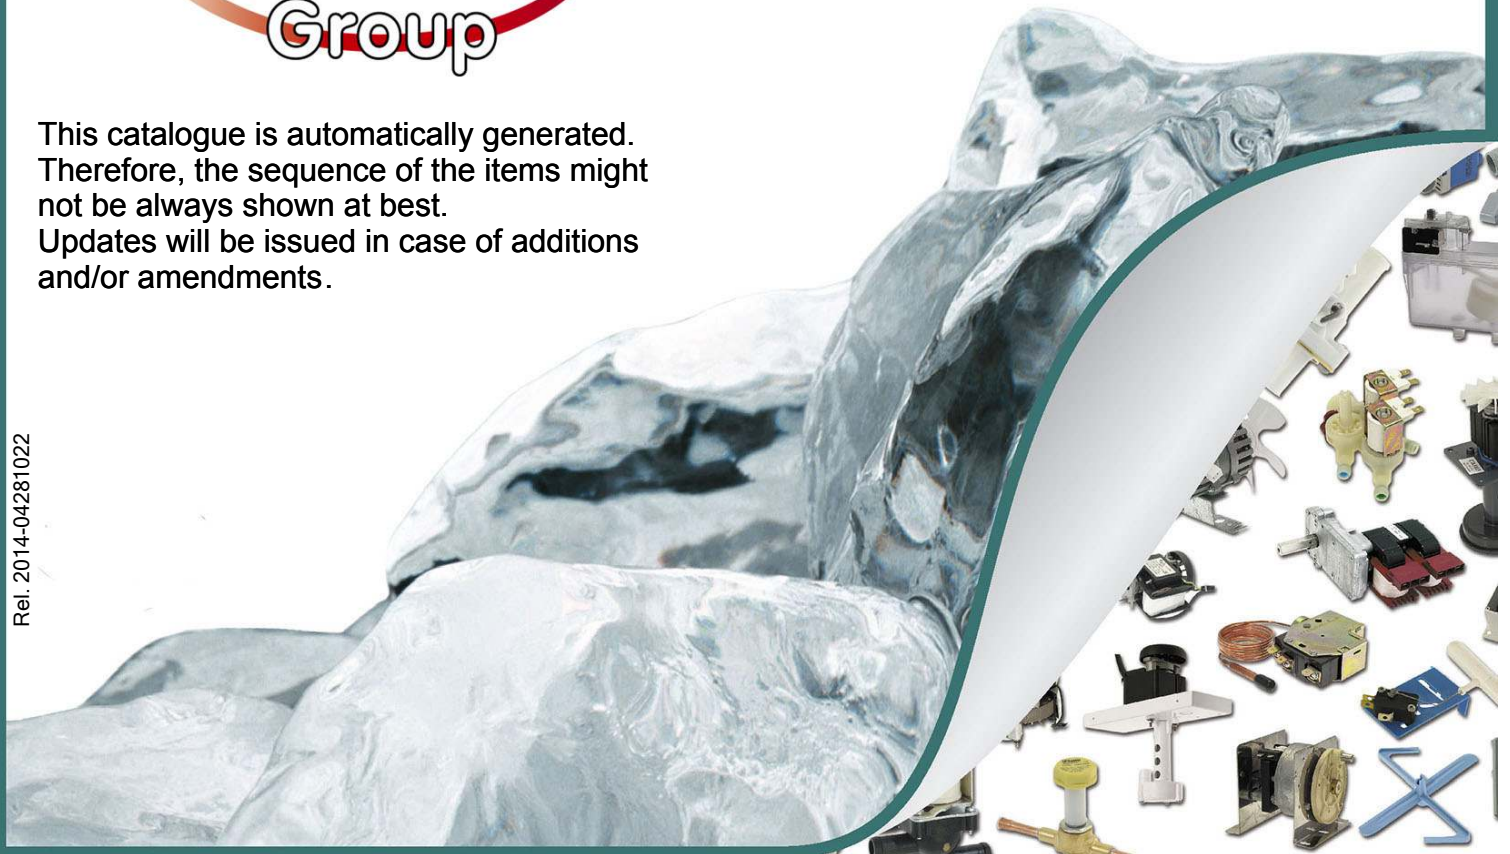



Timers and cycle reversing switches

 


Suitable for:

Suitable for:

3322128 TIMER P36 2 CAMS 15 MINUTES
230V 50/60Hz

3322213 TIMER P36 2 CAMS 15 MINUTES
230V 50/60Hz
for ALL MODELS
for Icemaker (ANGELO PO)

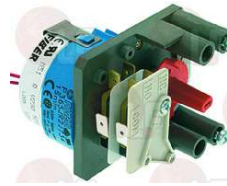

3322129 PROGRAMMER 11904 F1 4 CAMS 12 MINUTES
230V 50/60Hz
without pin
for Icemaker (BREMA) CB1260 - CB1265 - CB1560
CB246 - CB249 - CB316 - CB416 - CB425 - CB640
CB840 - CB955 - C80 - ICEWATER45 - IC24 - IC30

3322322 PROGRAMMER 11904 F1 4 CAMS 15 MIN.
230V 50/60Hz
without pin
for Icemaker (BREMA)



BREMA 23222
ELECTROLUX 085324
NTF N23222
ZANUSSI 0KL019
ELECTROLUX 0KL019
EURFRIGOR RFS0B869
WHIRLPOOL 185324
ZANUSSI 023222
ELECTROLUX 023222
EVERLASTING
WHIRLPOOL 123222
ZANUSSI 085324

BREMA 23248
NTF N23248
ELECTROLUX 085329
ZANUSSI 085329
EVERLASTING

3322246 PROGRAMMER 11904 F1 4 CAMS 15 MINUTES
110V 50/60Hz
without pin
for Icemaker (BREMA) CB1265 - CB246 - CB249
CB316 - CB416 - CB425 - CB640 - CB840 - CB955
C80 - IC24 - IC30

3322218 TIMER P20 4 CAMS 9 MINUTES
230V 50/60Hz
without shaft
for Icemaker (BREMA) VM500 - VM900



BREMA 23259
NTF N23259
ELECTROLUX 099423
ZANUSSI 099423
EVERLASTING

BREMA 23539
EVERLASTING
ZANUSSI 087807
BREMA 23559
NTF N23559
ELECTROLUX 087807
NTF N23559

3322217 TIMER 11904 F1 4 CAMS 10 MINUTES
230V 50/60Hz
without shaft
for Icemaker (BREMA) CB1565 - CB184 - C150 - C300
DSS42 - IC18

3322332 TIMER 11904 F1 4 CAMS 18 MINUTES
230V 50/60Hz
without pin
for Icemaker (BREMA) CB1265 - CB1565 - CB246
CB249 - CB316 - CB416 - CB425 - CB640 - CB840
CB955 - C150 - C300 - C80 - ICEWATER45 - IC30



BREMA 23247
NTF N23247
ELECTROLUX 085285
WHIRLPOOL 185285
EVERLASTING
ZANUSSI 085285

BREMA 23396
NTF N23780
BREMA 23780
NTF N23396



Timers and cycle reversing switches



Suitable for:

3322331 TIMER 11904 F1 4 CAMS 8 MINUTES
230V 50/60Hz
without pin
for Icemaker (BREMA) VM500A



BREMA 23635
NTF N23635

ELECTROLUX 099322
ZANUSSI 099322

EVERLASTING

Suitable for:

3322201 TIMER P23 1 CAM 15 MINUTES
230V 50/60Hz
for Icemaker (SCOTSMAN) ACM125



ELECTROLUX 086213
ZANUSSI 086213

SCOTSMAN 620244.02

SIMAG 620244.02

3322200 TIMER P23 2 CAMS 12 MINUTES
230V 50/60Hz
for Icemaker (SCOTSMAN) ACM85

 


ELECTROLUX 086034
ZANUSSI 086034

SCOTSMAN 620244.09

SIMAG 620244.09

3322125 TIMER P36 2 CAMS 15 MINUTES
230V 50/60Hz
for SD22 - SD210
for EC20-30-40-50
for Icemaker (EURFRIGOR) EC20 - EC30 - EC40 - EC50
for Icemaker (MIGEL) - Series KL
for Icemaker (SIMAG) SD210 - SD22

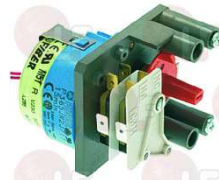

ELECTROLUX 0KM738
MANITOWOC 2006649
SCOTSMAN 620431.00
ZANUSSI 0KM738

EURFRIGOR RES0A822
MIGEL 1LT017
SIMAG Z1EL003

MACH 80001LT017
SCOTSMAN Z1EL003
SIMAG 620431.00

3322219 TIMER P36 2 CAMS 12 MINUTES
230V 50Hz
for Icemaker (SIMAG) SD22 - SD23 - SD30



ICEMATIC CS62044100
SIMAG 620441.00

ICEMATIC 19800001

SCOTSMAN 620441.00

3322961 PROGRAMMER P195 2 CAMS 20 MIN.
230V 50Hz
for Icemaker (ITV) GALADP140 - GALADP20 - GALADP30
GALADP40 - GALADP55 - GALADP70 - GALADP90
PULSAR145 - PULSAR25 - PULSAR45 - PULSAR65
PULSAR85



ITV 100380

ITV 380

3322962 PROGRAMMER P195 3 CAMS 20 MIN.
230V 50Hz
for Icemaker (ITV) DELTA140 - DELTA30 - DELTA45
DELTA60 - DELTA80 - DELTA90



ITV 100986

ITV 986

3322298 1-CAM PROGRAMMER 88650107 30 MINUTES
230V 50Hz
for Icemaker (ITV) DELTADP140 - DELTADP20
DELTADP30 - DELTADP40 - DELTADP55 - DELTADP70
DELTADP90 - PULSAR145 - PULSAR25 - PULSAR45
PULSAR65 - PULSAR85



ITV 382



Timers and cycle reversing switches



Suitable for:

3322249 **TIMER 11904 F1 4 CAMS 12 MINUTES**
230V 50/60Hz
without pin
for Icemaker (KASTEL) 125/70 - 21/5 - 25/6 - 25/9
35/15 - 45/15 - 45/25 - 65/40 - 80/40 - 90/50



KASTEL K00075

Suitable for:

3322247 **TIMER P36 2 CAMS 8 MINUTES**
230V 50/60Hz
for Icemaker (SCOTSMAN) BARLINE65 - BARLINE90



SCOTSMAN 620441.02

SIMAG 620441.02